

Further Instructions *Maelezo zaidi*

- ✓ Avoid pouring liquids on the stove

Hakikisha jiko haimwagikini na kitu chochote

- ✓ Don't open the bottom door when the stove is cooking to extend the lifespan of your stove

Wakati unapopika, usifungue mlango ulio chini ili jiko yako idumu kwa muda mrefu

- ✓ The stove should not smoke. In case you notice that your stove is emitting smoke or soot is forming on your pot use a long stick to push down the wood. The flame should be coming from the holes only but not from the wood

Ako haifai kutoa moshi. Ukiona jiko yako inatoa moshi ama masizi yanaachwa kwenye sufuria, tumia kijiti kusukuma kuni chini. Moto unafaa kutoka kwa mashimo na wala sio kwa kuni zenyewe

- ✓ Observe necessary precautions when using the stove

Kuwa mwangalifu unapotumia jiko

Customer Care Line: 0723 241907



- ✓ Saves fuel by upto 75%
- ✓ Produces very hot flame
- ✓ Does not smoke when used correctly
- ✓ Does not form soot on the pot when used correctly
- ✓ Can use wood, maize comb, crop stems or other dry biomass
- ✓ Easy to light
- ✓ Durable

EFFECTIVE. EFFICIENT. ECO-FRIENDLY.



WISDOM INNOVATIONS

P.O. Box 271
North Kinangop 20318
Kenya

Phone: 0723 241907

E-mail: wisdomstoves@gmail.com

WISDOM STOVES

Providing Affordable Energy Solutions



Malaiika Jiko

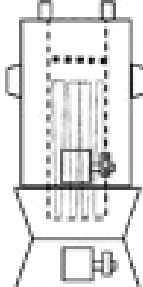
USER MANUAL

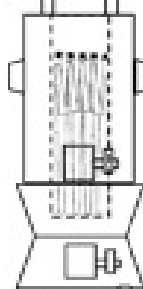
Save your money. Save your environment.

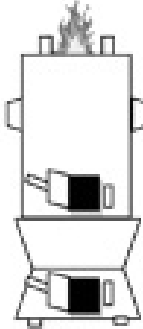
Please follow the following instructions

Tafadhali fuata maagizo yafuatayo

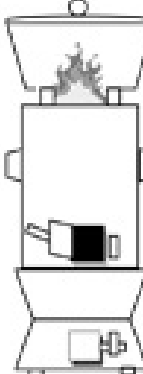
1.  Make sure the stove sits properly on your jiko without leaving spaces
Hakikisha jiko zimeingiana vizuri bila kuacha nafasi katikati

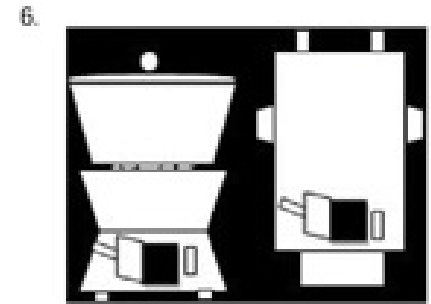
2.  Load dry wood into the stove. Ensure the wood is tightly packed together. The wood should not be above the holes at the top of the fuel chamber.
Panga kuni zilizokauka kwenye jiko. Hakikisha kuni zimeshikana vizuri bila kuacha mapengo. Kuni hazifai kupita mashimo yaliyo juu ya sehemu unayoweza kuni

3.  Slot in small pieces of wood at the top of the bigger pieces
Weka vipande vidogo vidogo vya kuni juu ya kuni kubwa ulizozipanga

4.  You may dip a few small pieces of wood in kerosene for easier lighting then place them on top. Open both doors and then light the stove from the top.
Unaweza kutumbukiza vipande vingine kwa mafuta taa kisha unwekelee juu. Fungua mlango yote miwili ya jiko na kisha uwashie moto kutoka juu.

NB: Don't pour kerosene on the wood.
Usimwagilie mafuta taa kwenye kuni

5.  After about 5 minutes, close the door at the bottom and leave the top door open.
Baada ya dakika kama tano hivi, fungua mlango wa jiko iliyo chini lakini uache mlango ulio juu wazi



After about 1½ hours, the flame will disappear and glowing charcoal will be left. Remove the stove and leave the charcoal in the jiko where you can continue cooking.

Baada ya isaa imoja na nusu hivi, ndimi za moto zitaisha na makaa yanayowaka yatabaki kwenye jiko. Ondoa "Malaika jiko" na uache makaa kwenye jiko iliyo chini ambapo unaweza ondelea kupika na makaa

NB: More wood can be added from the top after about an hour if you want to cook much longer

Baada ya isaa imoja, kuni zinaweza kuongezwa kwenye jiko kutoka juu ikiwa unataka kuendelea kupika kwa muda mrefu

WISDOM INNOVATIONS

P.O. Box 271
North Kinangop 20318
Kenya

Phone: 0723 241907
E-mail: wisdomstoves@gmail.com